

125B

DRILL TEMPLATE

Measure all drilling coordinates from **center** (0,0) of enclosure surface


“MATTY” 125B Drill Template

Print at 100% on 8.5” x 11” paper.

Clipping will occur but it is just bleed.

Some of your parts may have different hole sizes than what is specified here.

www.zachweeks.com/pedals/matty.html

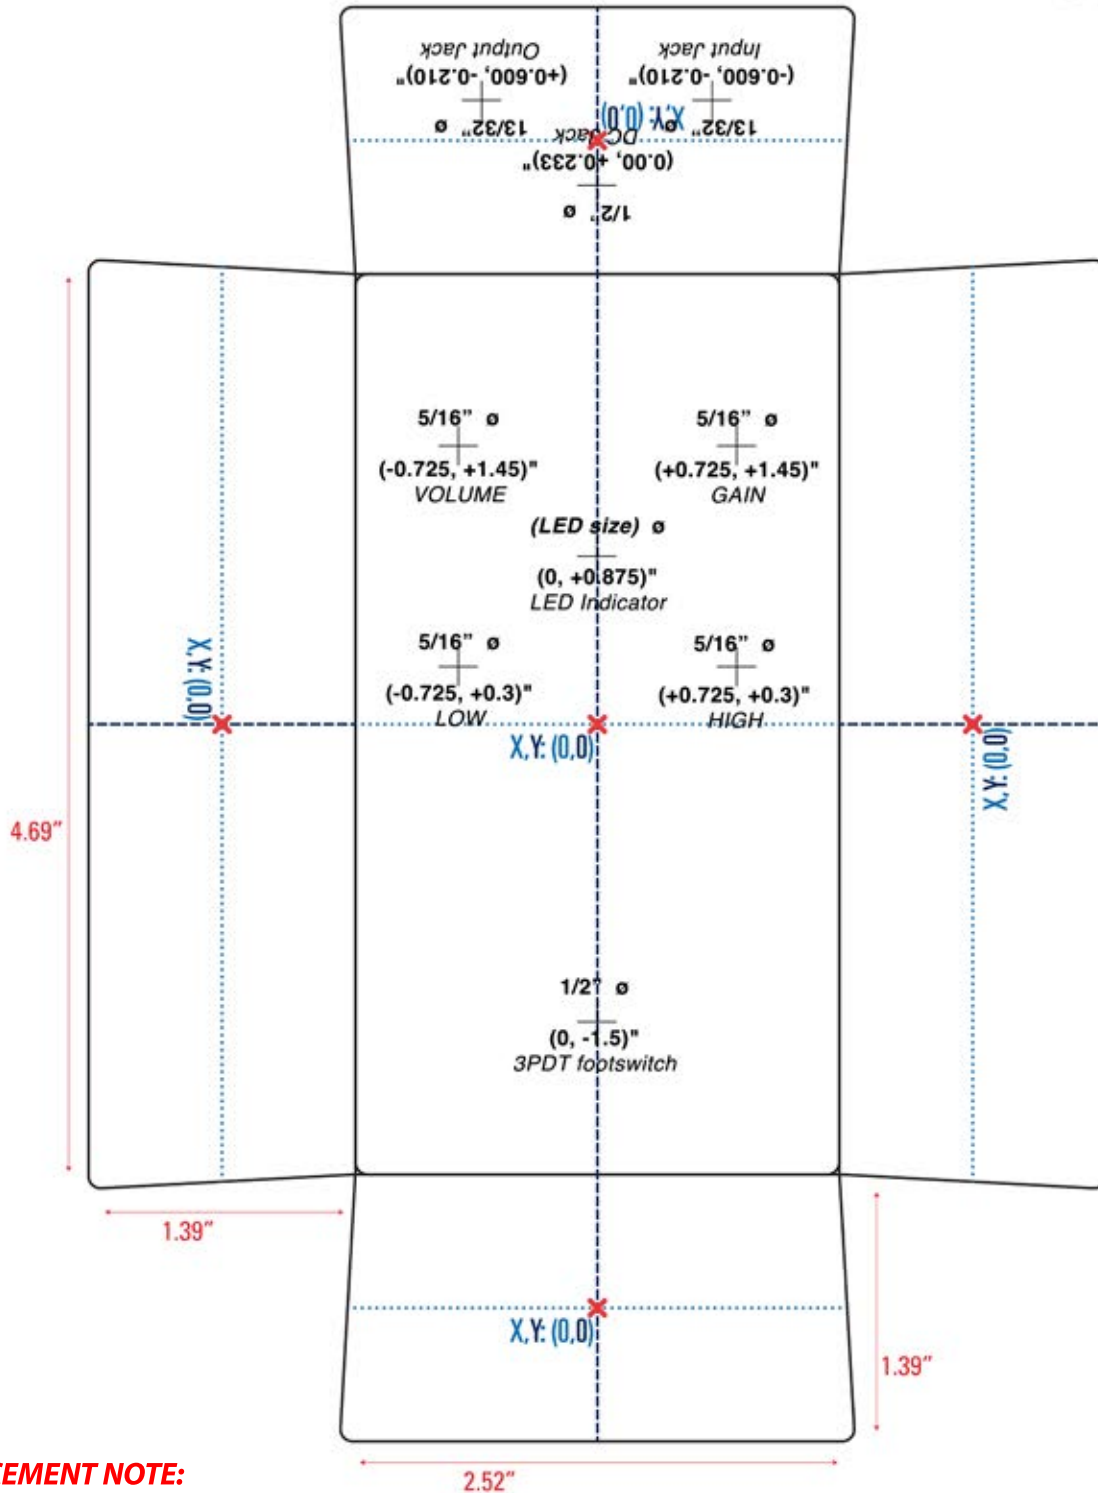

LED PLACEMENT NOTE:

On the pictured build on the “Matty” page of my site, the LED is located in a different location. There is actually a spot in the center of the PCB for the LED to live. If you want to place the LED elsewhere, jump the “LED1” pads on the PCB and run a wire from the “L+” pad on the footswitch I/O section at the bottom of the PCB to the anode of your LED and wire the cathode of the LED to the 3PDT terminal the “L+” wire would have gone to.

